



Getting started

With

Angle Adjustment Mechanism

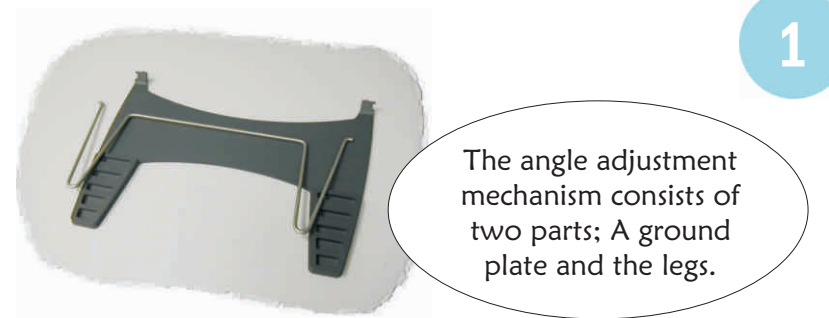


The angle adjustment mechanism consists of two parts; A ground plate and the legs.

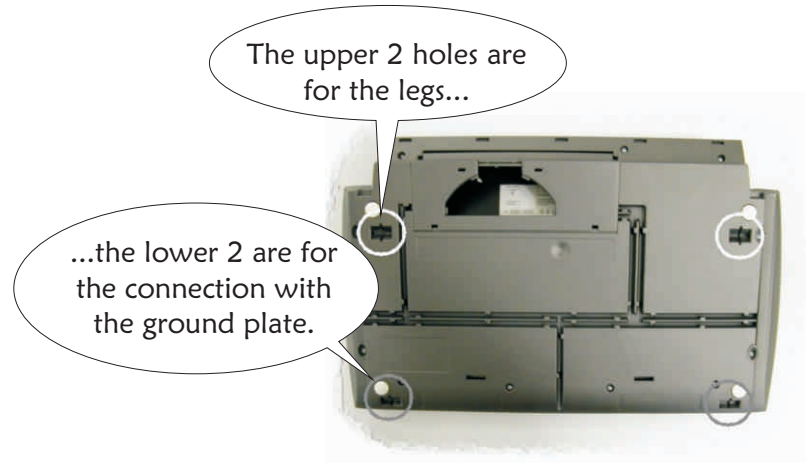


The upper 2 holes are for the legs...

...the lower 2 are for the connection with the ground plate.

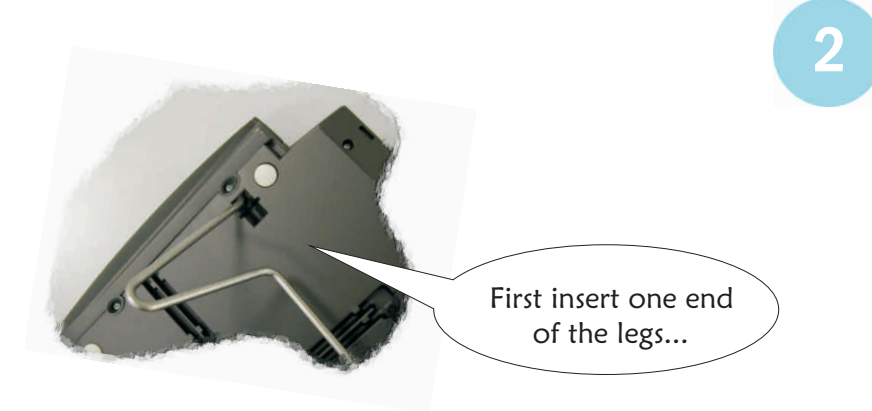

First insert one end of the legs...

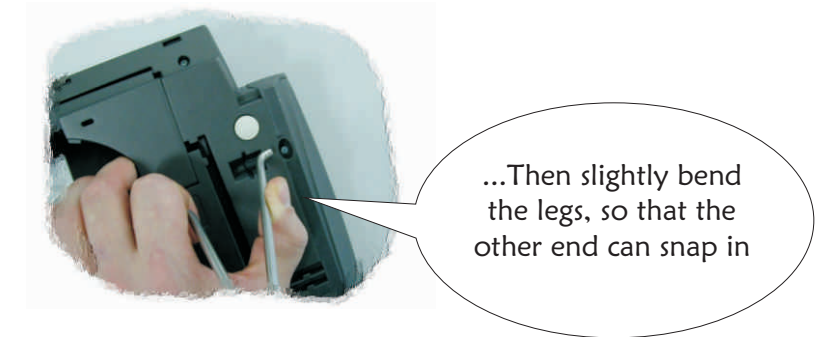

...Then slightly bend the legs, so that the other end can snap in




Next, insert one side of the plate.



Then **carefully** bend the plate to insert the other



Turn your FREE+ configuration back on its "new" feet and you are finished!

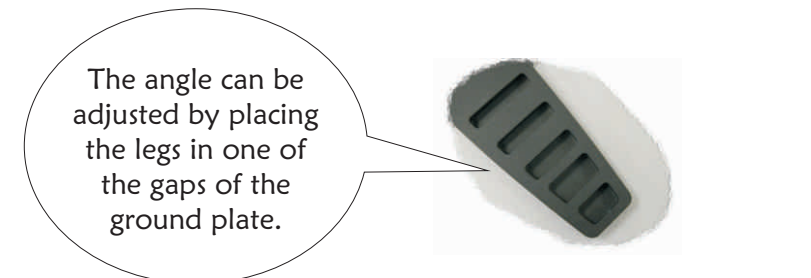

The angle can be adjusted by placing the legs in one of the gaps of the ground plate.