
Getting Started with

BeFREE 10

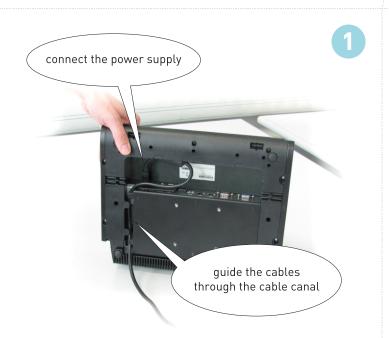





First install operating system.


Then install drivers for BeFREE 10. You can find them on: htttp://downloads.tipro.net/bf/







Z



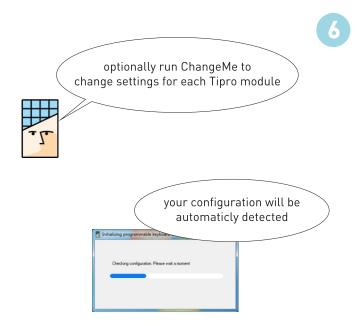


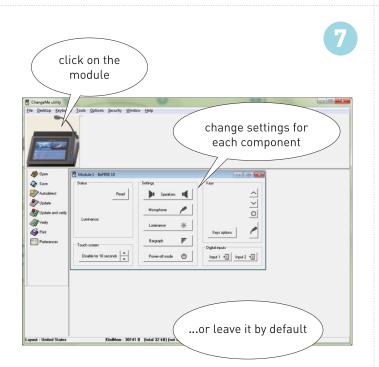

install ChangeMe

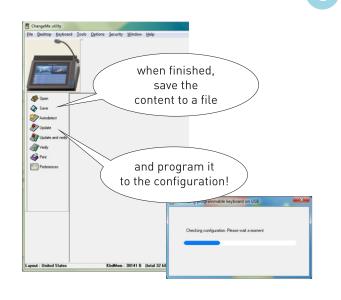

when disconnecting the power supply pull the connector housing and not the cable, to unlatch the connector

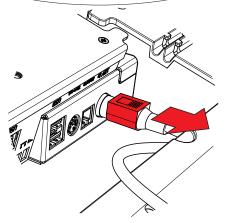

⚠ WARNINGS

- Place the external power supply on a dry place with enough air circulation*.
- Do not cover the grates at the rear of BeFREE*.
- Be careful with liquids around the BeFREE (and the external power supply). BeFREE is not waterproof.
- This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures
- The unit shall be supplied from external power supply which complies with clause 2.5 of standard IEC 60950-1:2005 (2nd ed.), requirements for Limited power source.

