

Getting Started with **FREE+ 22**



1

connect video and USB
cable to the PC

guide the cable(s)
through the cable canal



2


connect the power supply

monitor will turn on
automatically




3

optionally install ChangeMe

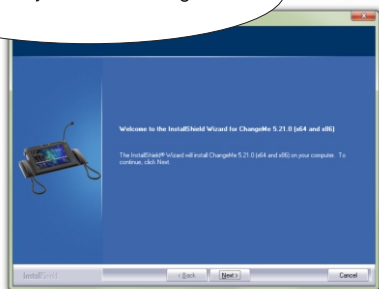

4

optionally run ChangeMe to
change settings for each Tipro module

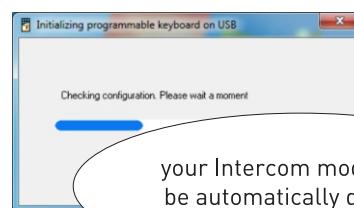


your Intercom module will
be automatically detected

5

click on the
module

change settings for
each component



...or leave it by default

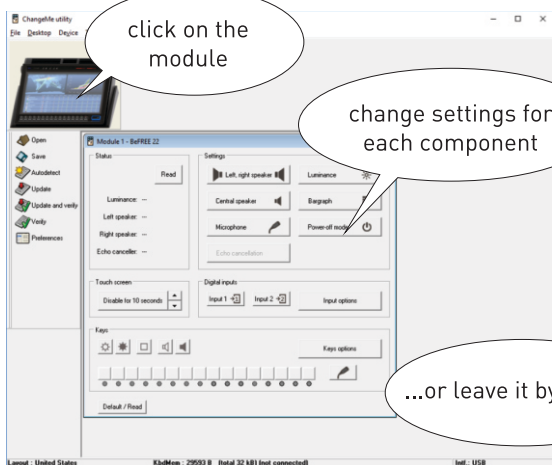

6

when finished,
save the
contents to a file


and program it
to the configuration!

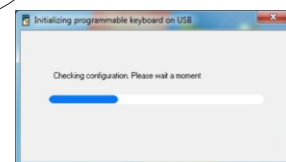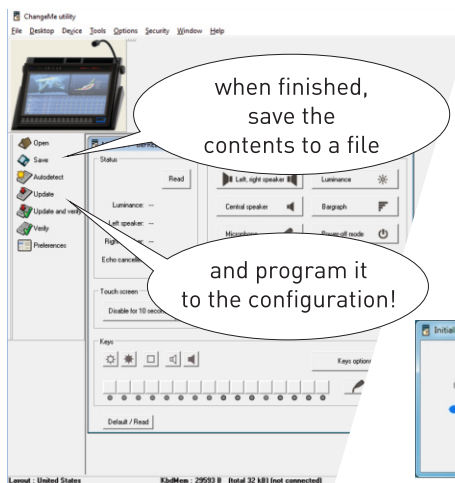

optional: replacing the keycaps


7

pull the keycap with the keycap remover...

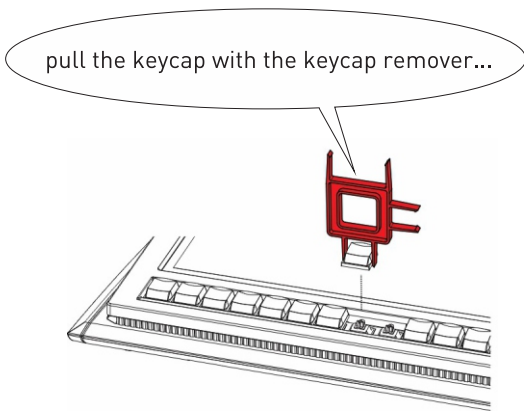

8


... and replace it with different (double) one. Just push the keycap on the keyswitch.

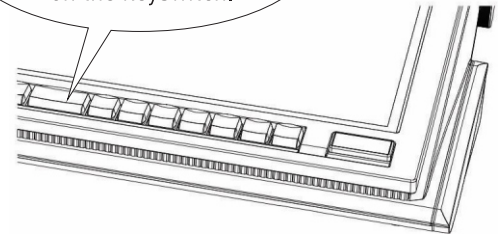

double keycap is incompatible with PTT, so one can't be swaped with the other

9


If the key is changed to double it must be set also in software.

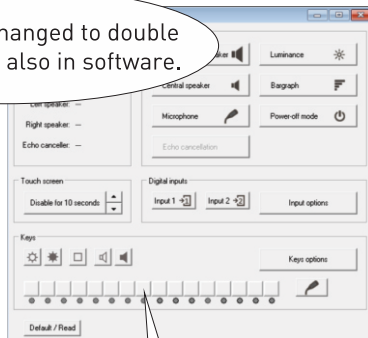

click on the key...


10

... and define as double.

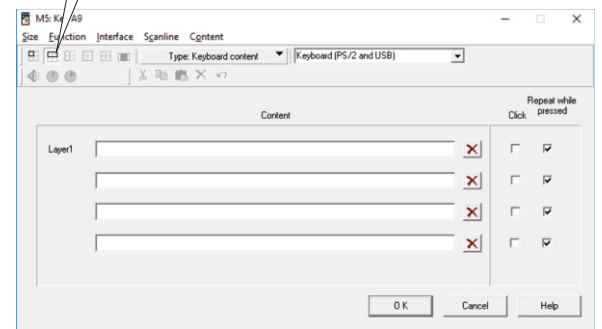

11

When disconnecting the power supply pull the connector housing and not the cable, to unlatch the connector

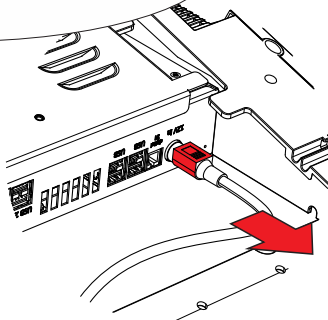

⚠ WARNINGS

- Place the external power supply on a dry place with enough air circulation*.
- Do not cover the grates at the rear of FREE+*.
- Be careful with liquids around the FREE+ (and the external power supply). FREE+ is not waterproof.
- This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures
- The unit shall be supplied from external power supply which complies with clause 2.5 of standard IEC 60950-1:2005 (2nd ed.), requirements for Limited power source.

*operating ambient temperature range of BeFREE and power supply is 5°C to 35°C