


Disable C-State reporting with J1900 CPU


If you experience problems with occasional freezing of the computer with Windows 10, disabling C-state reporting will most likely solve this.

1. Enter BIOS with when the Tipro logo shows.
2. Go to menu: Advanced > CPU configuration:

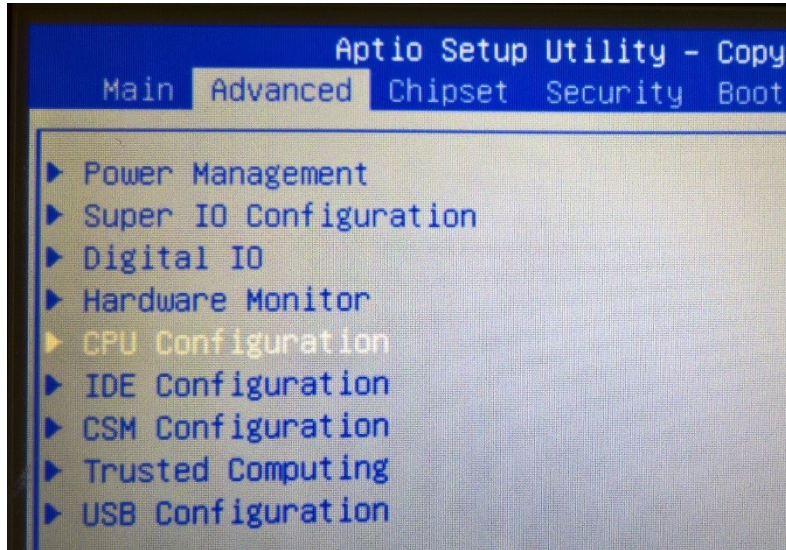


3. Then choose DISABLED for CPU C state report. Leave the rest.

If there is no "CPU C state Report" option, then you have to update the BIOS first. Please refer to "How to update BIOS" document (J1900_BIOS_Update_1_1.pdf).

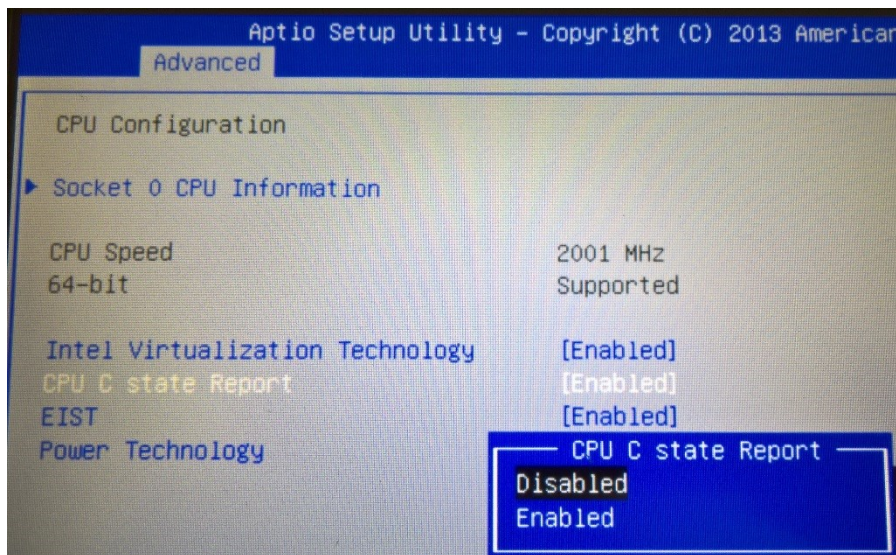

4. Save and exit

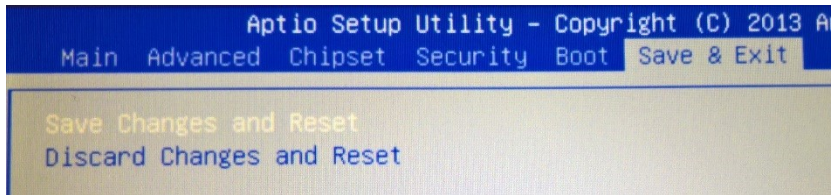

Turn off BeFREE